




NGS 80 LX

Quick Guide – Version 1.0

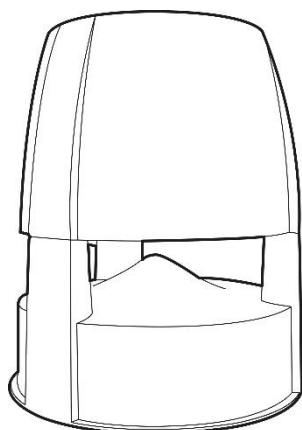

2-way garden loudspeaker

8" woofer+ 1.4" TWT

20/40/60W (100V line), 120W@8Ω

Max. SPL: 112 dB

LED effect: White colour 9W 3000K

DC12V input for LED effect (Power supply NOT INCLUDED)

120W garden speaker (60W@100V line) w/ LED

SAFETY INSTRUCTIONS

- Use the closed QR code to download the last user manual version from our website.
- Don't use this device close to the water or high humidity places. Clean only with dry cloth.
- Don't install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by WORK PRO
- Unplug this device during lightning storms or when unused for long periods of time.




50EBJ021



NGS 80 LX

Guía Rápida – Versión 1.0

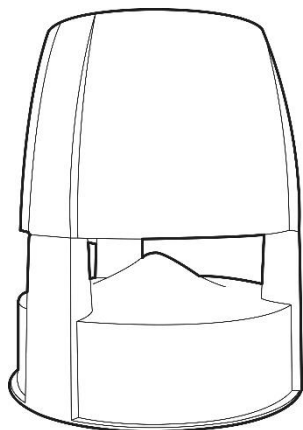

Altavoz para jardín de 2 vías

Woofer de 8" + TWT de 1.4"

20/40/60W (100V line), 120W@8Ω

Max. SPL: 112 dB

Efecto LED: Color blanco 9W 3000K

Entrada DC12V para efecto LED (Alimentador NO INCLUIDO)

Altavoz de jardín de 120W (60W@100V line) c/ LED

INSTRUCCIONES DE SEGURIDAD

- Use el Código QR adjunto para descargar la última versión del manual de usuario desde nuestro sitio web.
- No use este dispositivo cerca del agua o zonas altamente húmedas. A la hora de limpiarlo, utilice un paño seco.
- No instale el dispositivo cerca de ninguna fuente de calor o fuego tales como calefactores, estufas o incluso amplificadores que produzcan calor.
- Proteja el cable de ser pinzado o pisado.
- Únicamente utilice accesorios especificados por WORK PRO
- Desenchufe el dispositivo si no va a ser utilizado en largos periodos de tiempo.



50EBJ021