 


WORK[®]



FS-4 User Instructions





Caution! This product is intended for indoor use only. To prevent fire or shock hazard, do not expose this apparatus under a high temperature or humidity area.

- 4 Channel output with pulse signal
- 3-pin XLR female DMX output
- 20 built-in programs(01-19 and AU programs)
- AUDIO/PROGRAM/SPEED/DIMMER/FULL ON/STAND BY mode
- Audio line in 100mV-1Vpp
- 4 digits Segment Display shows current activity and the function state.
- Power failure memory
- Power input: AC 9V, 500 mA min.
- table or 19" rack mount
- Dimensions: 483x76x44mm
- Weight: 1.2Kg

CONTROLS & FUNCTIONS(Front)

1. Power Switch
2. Channel LEDs: Shows the current intensity of corresponding channel.
3. AUDIO button: Activates Audio mode causing the program chasing with music rhythm.
4. PROGRAM button: Activates Program mode for the speed, audio intensity and dimming level.
5. SPEED button: Activates Speed mode causing the speed is set using UP/DOWN buttons.
6. DIMMER button: Activate Dimmer mode causing the light level is set using UP/DOWN buttons.

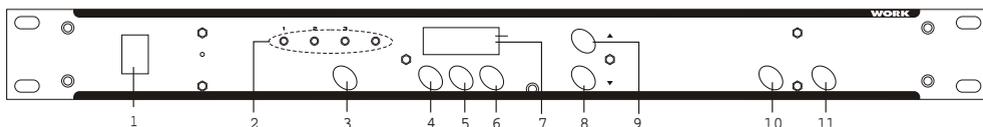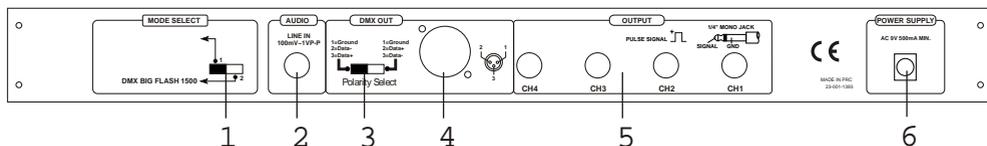


- 7. Segment Display: Shows current activity and the function state.
- 8. DOWN button: Press to decrease the display value
- 9. UP button: Press to increase the display value.
- 10. FULL ON button: Press this button to bring overall channels to full intensity. Release will deactivate this mode.
- 11. STAND BY button: Tap this button to kill all output except that the FULL ON button is pressed. A second tap of this button will leave this mode.

CONTROLS & FUNCTIONS(Rear)

- 1. Mode Select switch: Move to the left or right position to select desired control mode.
- 2. Audio Input: This jack accepts a line level audio input signal to synchronize chase and provide audio intensity effects. The audio input signal ranges from 100mV to 1Vpp.
- 3. DMX Polarity Select switch: Move the switch to the left, the DMX output is a 3-pin XLR female with pin 2(data). Move to the right, the DMX output is a 3-pin XLR female with pin 2(data+).
- 4. DMX OUT: Connect the DMX output to the DMX input on the first strobe with DMX protocol.
- 5. Channel Output: Connect these output to the input on the power pack.
- 6. Power Supply: This input jack allow a recommended AC-DC adaptor rated at 9v AC (at least 500 mA) to provide power to the unit.

OPERATION GUIDE:

- 1. Audio mode
Press the AUDIO button causing the Segment Display shows *Ado*, the programs chase with audio intensity effects.
- 2. Program mode
Press the PROGRAM button, the program will chase at the current speed, dimming level and audio intensity. Tap the UP/DOWN button to select the program from 18 built-in programs to chase.
- 3. Speed mode
Press the SPEED button, then adjust the speed using UP/DOWN button.
- 4. Dimmer mode
Press the DIMMER button, then adjust the dimming level using UP/DOWN button.

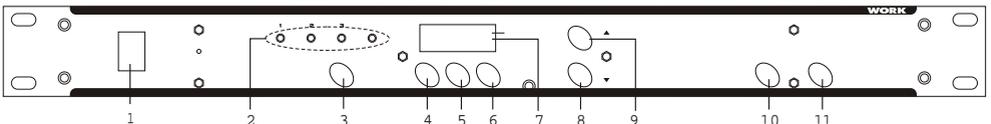

5. Full On mode

Press the FULL ON button to bring overall output to full intensity. Release will deactivate this mode.

6. Stand By mode

Tap the STAND BY button to kill all output except that Full On is activated, and the LED blinks indicating Stand By is active. A second tap will leave this mode.

AUTHORIZED DISTRIBUTOR:

Equipson S.A.
www.equipson.com
support@equipson.com

**WORK**

All rights reserved.