

Marktiney®**MT 30**
Tuner**Owner Manual**

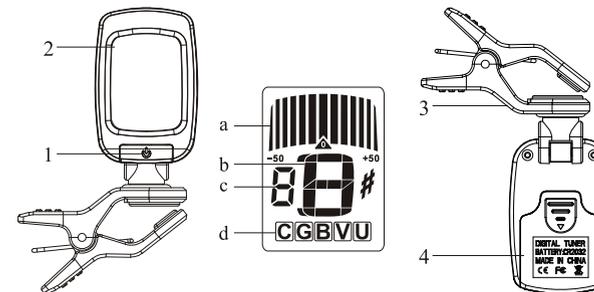
188mm

Specifications

Tuning item	: Chromatic, Guitar, Bass, Violin, Ukulele
Detection range	: A0 (27.5Hz)–C8 (4186.00Hz)
Detection accuracy	: ±0.5 cent
Power supply	: one 2032 button battery
Dimensions	: 82mmx40mmx22mm
Weight	: 22g
Included items	: Owner's Manual, one 2032 button battery

Precautions

- Avoid use in direct sunlight, extreme temperature or humidity, excessive dust, dirt or vibration or close to magnetic fields.
- Be sure to power off the unit when not in use and remove the battery for extended periods of inactivity.
- Radios and televisions placed nearby may experience reception interference.
- To avoid damage, do not apply excessive force to the switches or controls.
- For cleaning, wipe with a clean, dry cloth. Do not use flammable liquid cleaners such as benzene or thinner.
- To avoid damage fire, or electrical shock, do not place liquids near this equipment.

Controls and functions

1. Power button (press and hold 2 seconds) & Tuning item button
2. Display: a. Meter b. Note name c. String number
d. Tuning item
3. Clip
4. Battery Compartment

Tuning procedure

1. Press the power button.
Press the power button and hold 2 seconds to turn on (off) the tuner.
2. Select tuning mode
Press the same power button to select tuning item out of C (chromatic), G (guitar), B (bass), V (violin), U (ukulele).
3. Clip the tuner onto your instrument, and play a single note on your instrument. The note name (and string number) will appear in the display, and the tuning meter moves.
The left red meters appear: flat note
The center green meter appears: note in tune
The right yellow meters appear: sharp note

Power saving function

If there is no signal inputs in 3 minutes after the power is on, the tuner will turn off automatically.

Installing the battery

Pressing on the cover as marked in the back of the product, open the case, insert a CR2032 coin battery being careful to observe the correct polarity. Battery life may differ according to the conditions of use. If the unit malfunctions, and turning the power OFF and then ON does not resolve the problem, please remove and wait for 5 minutes to reinstall the battery.

Note: The battery attached is only for test purpose. In case that the storage time of the tuner is long, the battery may get dead, please replace the battery attached.