


WORK[®]

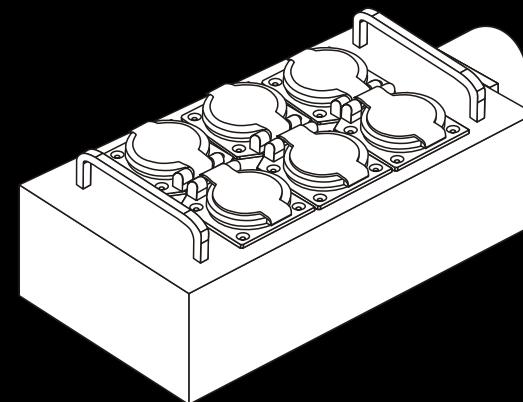

POWER SPLITTER

User Manual / Instrucciones de Usuario



WORK[®]


All rights reserved.

Equipson, S.A.
www.equipson.es
support@equipson.es

WORK®

POWER SPLITTER

User Instruction

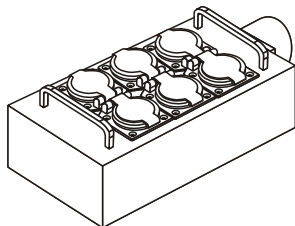

WARNING!!!

This product is intended for indoor use only.

This apparatus must be earthed.

To prevent fire or shock hazard, do not expose this product under a high temperature or humid area.

SPECIFICATIONS

POWER INPUT 3 phase input, AC 230V~50/60Hz, 16A/Phase
INPUT SOCKET PCE 5 pin male connector x1
OUTPUT SCHUKOx6
DIMENSIONS 220x150x102mm
WEIGHT 1.8Kg




24-004-1052
Rev 1.0

WORK®

POWER SPLITTER

Manual de Instrucciones

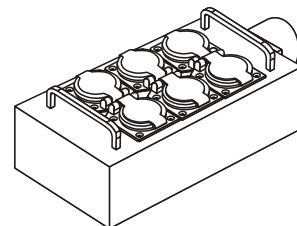

ATENCION!!!

Este producto está diseñado solo para usos en interior.

Este aparato debe ser conectado a una toma de tierra.

Para prevenir el riesgo de fuego o descarga eléctrica, no exponga es producto a altas temperatura o humedad.

ESPECIFICACIONES

ALIMENTACION 3 fases de entrada, AC 230V~50/60Hz, 16A/Fase
CONECTOR DE ENTRADA Conector PCE macho de 5 pines
SALIDA SCHUKOx6
DIMENSIONES 220x150x102mm
PESO 1.8Kg



24-004-1052
Rev 1.0