



## PULSE DRIVE SERIES

Pulse Drive Series commands guide.

Guía de comandos de la Serie Pulse Drive.

Version 1.2



# Pulse Drive series commands guide.

UDP /IP Port: 8023

Search	01 20 03 00 13 FF FE FF FF FF FF 00 67 00 FF FF FF FF 40
GAIN	01 20 03 00 15 FF FE FF FF FF FF 00 64 ch val 00 ip1 ip2 ip3 ip4 40
MUTE	01 20 03 00 15 FF FE FF FF FF FF 00 65 ch val 00 ip1 ip2 ip3 ip4 40
INPUT	01 20 03 00 15 FF FE FF FF FF FF 00 66 ch val 00 ip1 ip2 ip3 ip4 40

Value(Dec)	Gain(dB)	Step
0	MUTE	
1	-70	5dB
2	-65	
3	-60	
4	-55	
5	-50	
6	-45	
7	-40	
8	-35	
9	-30	
10	-29	1dB
11	-28	
12	-27	
13	-26	
14	-25	
15	-24	
16	-23	
17	-22	
18	-21	
19	-20	0.5dB
20	-19.5	
21	-19	
22	-18.5	
23	-18	
24	-17.5	
25	-17	
26	-16.5	
27	-16	
28	-15.5	
29	-15	
30	-14.5	
31	-14	
32	-13.5	
33	-13	
34	-12.5	
35	-12	
36	-11.5	
37	-11	
38	-10.5	
39	-10	

Value(Dec)	Gain(dB)	Step
40	-9.5	0.5dB
41	-9	
42	-8.5	
43	-8	
44	-7.5	
45	-7	
46	-6.5	
47	-6	
48	-5.5	
49	-5	
50	-4.5	
51	-4	
52	-3.5	
53	-3	
54	-2.5	
55	-2	
56	-1.5	
57	-1	
58	-0.5	
59	0	
60	0.5	
61	1	
62	1.5	
63	2	
64	2.5	
65	3	
66	3.5	
67	4	
68	4.5	
69	5	
70	5.5	
71	6	
72	6.5	
73	7	
74	7.5	
75	8	
76	8.5	
77	9	
78	9.5	
79	10	



EQUIPSON, S.A.

Avda. El Saler, 14 Pol. Ind. L'Alteró

46460- SILLA

Valencia – Spain

[www.equipson.es](http://www.equipson.es) [support@equipson.es](mailto:support@equipson.es)