

MULTIPLAYER 12 WEB

RS232_Command Code

The communication between computer and unit is UART.

Start bit : 1

Data bits : 8

Stop bit : 1

Parity bit : none

CODE : HEX

Baud : 9600

Function	Command Code							Remark
STAND BY	45	31	00	FF	14	0D	0A	
1 / 6	45	31	00	FF	19	0D	0A	Station 1 / 6
2 / 7	45	31	00	FF	1B	0D	0A	Station 2 / 7
3 / 8	45	31	00	FF	11	0D	0A	Station 3 / 8
4 / 9	45	31	00	FF	17	0D	0A	Station 4 / 9
5 / 10	45	31	00	FF	12	0D	0A	Station 5 / 10
M1 / M6	45	41	00	FF	19	0D	0A	Station memory set up 1 / 6
M2 / M7	45	41	00	FF	1B	0D	0A	Station memory set up 2 / 7
M3 / M8	45	41	00	FF	11	0D	0A	Station memory set up 3 / 8
M4 / M9	45	41	00	FF	17	0D	0A	Station memory set up 4 / 9
M5 / M10	45	41	00	FF	12	0D	0A	Station memory set up 5 / 10
SHIFT	45	31	00	FF	59	0D	0A	M+5
PRESET	45	31	00	FF	15	0D	0A	
SLEEP	45	31	00	FF	08	0D	0A	
MENU	45	31	00	FF	50	0D	0A	
INFO	45	31	00	FF	48	0D	0A	
ALARM	45	31	00	FF	4A	0D	0A	
ENTER / TUNNING SCAN	45	31	00	FF	06	0D	0A	
MODE	45	31	00	FF	03	0D	0A	
MENU UP / TUNNIG UP	45	31	00	FF	55	0D	0A	
MENU DOWN / TUNNIG DOWN	45	31	00	FF	07	0D	0A	
AUTO SCAN UP	45	41	00	FF	55	0D	0A	
AUTO SCAN DOWN	45	41	00	FF	07	0D	0A	
LEFT (BACK)	45	31	00	FF	5E	0D	0A	
RIGHT	45	31	00	FF	05	0D	0A	
REPEAT	45	31	00	FF	47	0D	0A	
SUFFLE	45	31	00	FF	40	0D	0A	
PLAY / STOP	45	31	00	FF	18	0D	0A	
VOLUME -	45	31	00	FF	44	0D	0A	
VOLUME +	45	31	00	FF	0F	0D	0A	
MUTE	45	31	00	FF	51	0D	0A	
PREV	45	31	00	FF	0A	0D	0A	
F.B	45	31	00	FF	1E	0D	0A	
F.WD	45	31	00	FF	0E	0D	0A	
NEXT	45	31	00	FF	1A	0D	0A	